

Work Order ID 99353

99353

Page 1

April-05-13 1:18:18 PM

Item ID: D350-689-021 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Dual High Back Seat, LH
 Start Date: 4/04/13 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 4/04/13 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: ML5 Date: 13-04-08 Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
DSI 9588	B								
IIN-D350-689	B								
100	DOCUMENT CONTROL	0.00		27		1			
100				13426					
DC	Memo	0.00							
Document Control	Photocopy bluefile and create labels per PPP D350-689-021 CHG005								
110	Pick Kit	0.00							
110									
Packaging	Memo	0.00							
Packaging									

13425 DAS 06
 SP
 13-4-25

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION <div style="display: flex; justify-content: space-around;"> <div> <input type="checkbox"/> Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update </div> <div> <input type="checkbox"/> Skid-tube <input type="checkbox"/> Machining <input type="checkbox"/> Thermoforming <input type="checkbox"/> Large Fab </div> <div> <input type="checkbox"/> Crosstube <input type="checkbox"/> Small Fab <input type="checkbox"/> Finishing <input type="checkbox"/> Composite </div> <div> <input type="checkbox"/> Water Jet <input type="checkbox"/> Prod. Eng. Coord. <input type="checkbox"/> Rec/Store/Packaging <input type="checkbox"/> Supplier </div> <div> <input type="checkbox"/> Engineering <input type="checkbox"/> Quality <input type="checkbox"/> Other </div> </div>
--	--

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear	General		
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain	<input type="checkbox"/> Ovalized
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware	<input type="checkbox"/> Over/Under tolerance
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete	<input type="checkbox"/> Part Incorrect
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear	<input type="checkbox"/> Part Lost/Missing
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance	<input type="checkbox"/> Part Moved
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabeled	<input type="checkbox"/> Positioned Wrong
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread	<input type="checkbox"/> Power Loss/Surge
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset	<input type="checkbox"/> Pressure/Forced
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration	<input type="checkbox"/> Temperature/Cure
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence	<input type="checkbox"/> Weld
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions	<input type="checkbox"/> Wrong Stock Pulled
			<input type="checkbox"/> Other

Work Order ID 99353

April-05-13 1:18:18 PM

99353

Page 2

Item ID: D350-689-021

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Dual High Back Seat, LH

Start Date: 4/04/13 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 4/04/13 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

120

QC4- 100% Inspect kits for completeness

0.00

120

QC

Memo

0.00

Quality Control

DAS 27 13.426

130

Packaging

0.00

130

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D350-689-021

Location: _____

PPP Rev: EL

DAS 06 13.4126

140

QC21- Final Inspection - Work Order Release

0.00

140

QC

Memo

0.00

Quality Control

MC 13.4-26
MC 13.4-26

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear	General	Other
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabeled
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized
		<input type="checkbox"/> Over/Under tolerance
		<input type="checkbox"/> Part Incorrect
		<input type="checkbox"/> Part Lost/Missing
		<input type="checkbox"/> Part Moved
		<input type="checkbox"/> Positioned Wrong
		<input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced
		<input type="checkbox"/> Temperature/Cure
		<input type="checkbox"/> Weld
		<input type="checkbox"/> Wrong Stock Pulled
		<input type="checkbox"/> Other

Picklist Print

April-05-13 1:18:18 PM

Page 1

Work Order ID: 99353

Parent Item: D350-689-021

Parent Item Name: Dual High Back Seat, LH

Start Date: 4/04/13

Required Date: 4/04/13

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:A 08-12-23 new issue DD verified by: LL 08.12.24 IPP Rev:B chg002 DD 10.02.12
verified by:JLM IPP Rev:C chg004 DD 11.09.28 verified by:JLM IPP
Rev:D 12.01.12 now @ CHG005 (ecn12-501) DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D350-689-023 Energy Attenuating Floor Provisions	SM	Manufactured	No			110	Each	0.0000	0	160'612	SD		
D350-689-043 Dual High Back Seat Assembly	SM	Manufactured	No			110	Each	0.0000	0	99283	SD		
D3018-1 Seat Cushion		Manufactured	No			110	Each	3.0000	1	SP			
	SM			<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST314A		3							
				95384		3							
D3019-1 Seat Cushion		Manufactured	No			110	Each	3.0000	0	1X			
	SM			<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST314A		3							
				95402		3							
										1X			

SP13-4-25

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty.	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear	General	Other
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabeled
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized
		<input type="checkbox"/> Over/Under tolerance
		<input type="checkbox"/> Part Incorrect
		<input type="checkbox"/> Part Lost/Missing
		<input type="checkbox"/> Part Moved
		<input type="checkbox"/> Positioned Wrong
		<input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced
		<input type="checkbox"/> Temperature/Cure
		<input type="checkbox"/> Weld
		<input type="checkbox"/> Wrong Stock Pulled
		<input type="checkbox"/> Other

DART SERVICE INSTRUCTION
TO AMEND INSTALLATION INSTRUCTIONS IIN-D350-689 REV. B
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-689 REV. 1
REF. TCCA STC: SH02-33
REF. FAA STC: SR01620NY
REF. EASA STC: EASA.IM.R.S.01453
REF. TCA STC: 2005S03-09

1.0 PURPOSE

For D350-689-011/-013 at CHG 006/005 and later and D350-689-021/-023 Kits at CHG 005/004 and later, the D3026-1 Channel has been replaced with the D4575-1 Beam and D4575-3 Doubler and the D3234-3 Doubler has been removed. Consequently, the installation instructions for D350-689-011/-013 at CHG 006/005 and D350-689-021/-023 at CHG 005/004 are updated per Section 2.0 of this Service Instruction. The parts list update is shown in Section 4.0 of this Service Instruction. There is a negligible change to the weight and balance.

2.0 INSTALLATION CHANGES FOR D350-689-013

Section 3.9, *INSTALLATION OF D350-689-013 FLOOR PROVISIONS KIT* (pages 4 and 5 of IIN-D350-689), is changed as follows:

Item 3.3.15 is:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer as shown in Figure 1 of this Service Instruction. Transfer drill existing holes from the aircraft floor to the D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer as shown in Figure 1 of this Service Instruction and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Note: Drill a Ø1.00" (Ø25.4 mm) hole in the D4575-1 Beam to clear extension tube of collective and cutout as required for clearance of collective opening and fwd bulkhead as shown in Figure 3 of this Service Instruction.

Item 3.3.15 was:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D3026-1 Channel as shown in Figure 4 and transfer existing holes from the aircraft floor to the D3026-1 Channel & D3032-1 Spacer. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D3026-1 Channel & D3032-1 Spacer as shown in Figure 4 and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Item 3.3.17 is:

Counter sink holes in the D3032-1 Spacer for MS20426AD4 rivets. Install D4575-1 Beam, D4575-3 Doubler, and D3032-1 Spacer to floor using MS20426AD4 rivets.

Item 3.3.17 was:

Counter sink holes in the D3032-1 Spacer for MS20426AD4 rivets. Install D3026-1 Channel and D3032-1 Spacer using MS20426AD4 rivets.

Item 3.3.22 is:

Rivet D3234-1 Doubler to D3025-1 Beam as shown in Figure 7 using MS20470AD4 rivets. Continue at step 3.3.25.

Item 3.3.22 was:

Rivet D3234-1 Doubler to D3025-1 Beam and D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets. Continue at step 3.2.25.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 12.11.09
CERT. NO.: SH02-33
ISSUE NO.: 1

B-	CHANGES TO -013 KIT INSTALLATION. REF: CIR12-12.	MB	12.11.09
A-	NEW ISSUE	MB	11.12.22
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 1 OF 6
APPROVED		TITLE	SCALE
DE APPR.		INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

99353 MJS
13-04-08

3.0 INSTALLATION CHANGES FOR D350-689-023

Section 3.9, *INSTALLATION OF D350-689-023 ENERGY ATTENUATING FLOOR PROVISIONS KIT* (pages 8 and 9 of IIN-D350-689), is changed as follows:

Item 3.9.8 is:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D4575-1 Beam and D4575-3 Doubler as shown in Figure 2 of this Service Instruction. Transfer drill existing holes from the aircraft floor to the D4575-1 Beam and D4575-3 Doubler. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D4575-1 Beam and D4575-3 Doubler as shown in Figure 1 of this Service Instruction and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Note: Drill a Ø1.00" (Ø25.4 mm) hole in the D4575-1 Beam to clear extension tube of collective and cutout as required for clearance of collective opening and fwd bulkhead as shown in Figure 3 of this Service Instruction.

Item 3.9.8 was:

If there is an existing stringer at LBL 27.33, it will need to be removed from that location. Locate D3026-1 Channel as shown in Figure 4 and transfer existing holes from the aircraft floor to the D3026-1 Channel. Ensure 1.0" to 1.5" rivet pitch and add additional holes if required. If there is no existing stringer, locate D3026-1 Channel as shown in Figure 4 and drill Ø0.128" holes on a 1.0" to 1.5" pitch.

Item 3.9.10 is:

Attach D4575-1 Beam and D4575-3 Doubler to floor using qty (14) MS20426AD4 rivets.

Item 3.9.10 was:

Attach D4575-1 Channel to floor using qty (14) MS20426AD4 rivets.

Item 3.9.12 is no longer applicable:

~~Rivet D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets.~~

Item 3.9.12 was:

Rivet D3234-3 Doubler to D3026-1 Channel as shown in Figure 7 using MS20470AD4 rivets.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED


BY:

D. SHEPHERD (DE # 02)

DATE: 12.11.09
CERT. NO.: SH02-33
ISSUE NO.: 1

DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA
DRAWN		
CHECKED		DRAWING NO. DSI 9588
MFG. APPR.	N/A	REV. B SHEET 2 OF 6
APPROVED		TITLE INSTALLATION CHANGE
DE APPR.		SCALE NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

99353

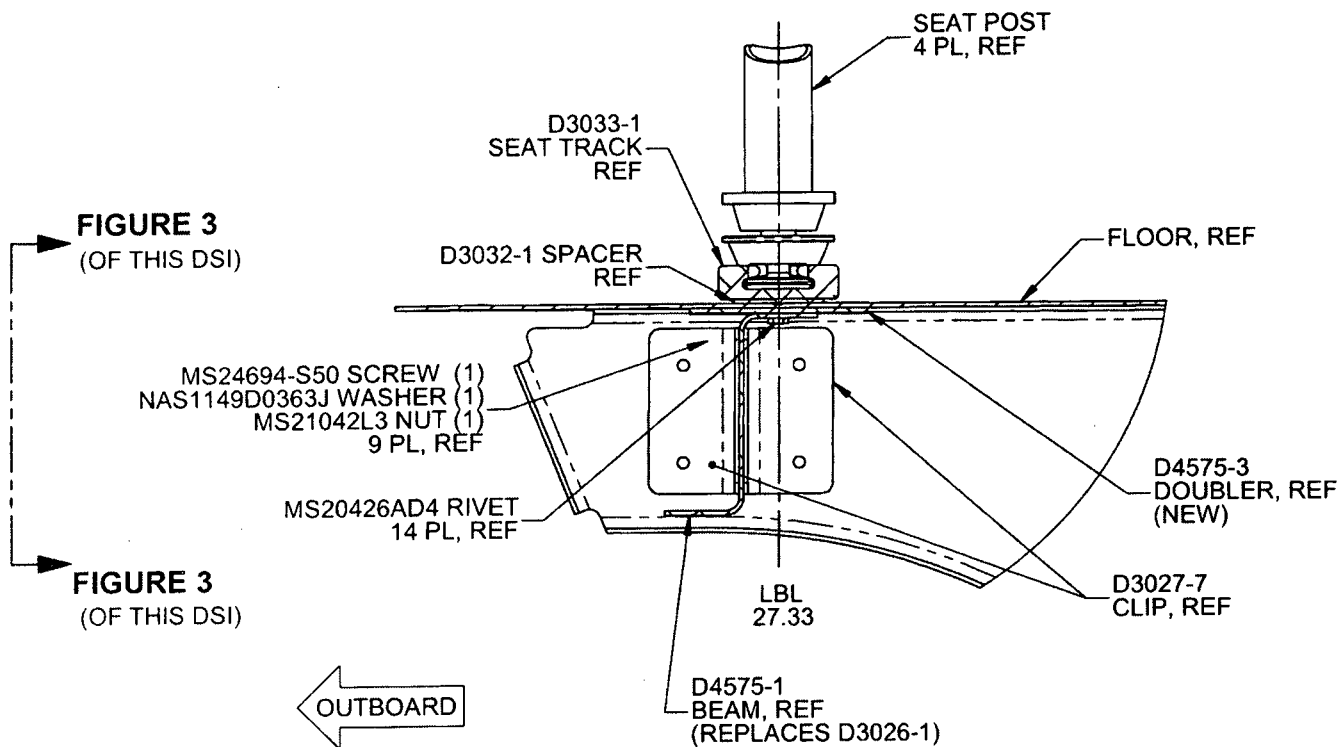

CROSS SECTION VIEW F-F/M-M: From Figures 5 and 7 (IIN-D350-689)
CROSS SECTION VIEW F-F/M-M: From Figures 25-5 and 25-7 (ICA-D350-689)

FIGURE 1: UPDATES TO CROSS SECTIONS F-F AND M-M
 With reference to Figures 5 and 7 of IIN-D350-689
 (Figures 25-5 and 25-7 of ICA-D350-689)

CANADA
 DEPARTMENT OF TRANSPORT
 AIRCRAFT CERTIFICATION
 BRANCH
 DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.11.09
 CERT. NO.: SH02-33
 ISSUE NO.: 1

DESIGN	B	DART AEROSPACE LTD	
DRAWN	B	HAWKESBURY, ONTARIO, CANADA	
CHECKED	TH	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 3 OF 6
APPROVED	TH	TITLE	SCALE
DE APPR.	TH	INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

99353

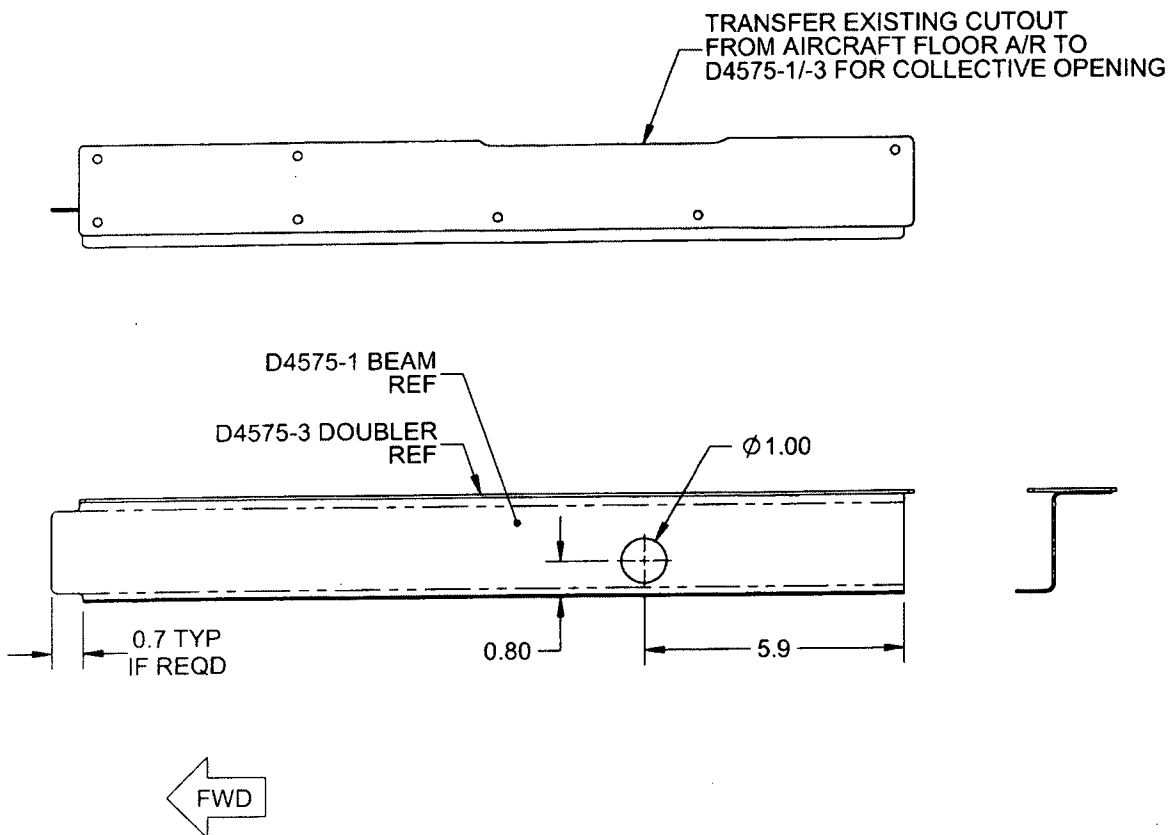


FIGURE 3: RELIEFS ON D4575-1/-3
(ONLY D4575-1/-3 SHOWN FOR CLARITY)
VIEW LOOKING INBOARD

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.11.09

CERT. NO.: SH02-33

ISSUE NO.: 1

DESIGN	13	DART AEROSPACE LTD	
DRAWN	13	HAWKESBURY, ONTARIO, CANADA	
CHECKED	13	DRAWING NO.	REV. B
MFG. APPR.	N/A	DSI 9588	SHEET 5 OF 6
APPROVED	13	TITLE	SCALE
DE APPR.	13	INSTALLATION CHANGE	NTS
DATE	12.11.09	COPYRIGHT © 2011 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

99353

4.0 PARTS LIST CHANGE

The parts list of D350-689-021/-023 at CHG 005/004 or later is amended as follows:

5. PARTS LIST (IIN-D350-689)

25.10 PARTS LIST (ICA-D350-689)

IS:

Qty -011	Qty -013	Qty -015	Qty -017	Qty -019	Qty -021	Qty -023	Qty -041	Qty -043	Part Number	Description
X									D350-689-011	DUAL HIGH BACK SEAT INSTALLATION, LH
1	X								D350-689-013	FLOOR PROVISIONS KIT
		X							D350-689-015	SEAT MODIFICATION KIT
			X						D350-689-017	SHOULDER HARNESS KIT
				X					D350-689-019	CONTROL GUARD KIT
					X				D350-689-021	DUAL HIGH BACK SEAT INSTALLATION, LH
					1	X			D350-689-023	ENERGY ATTENUATING FLOOR PROVISIONS KIT
1							X		D350-689-041	DUAL HIGH BACK SEAT ASSEMBLY
					1			X	D350-689-043	DUAL HIGH BACK SEAT ASSEMBLY
									D3026-1	CHANNEL (REMOVED)
									D3234-3	DOUBLER (REMOVED)
	1					1			D4575-1	BEAM (REPLACES D3026-1)
	1					1			D4575-3	DOUBLER (NEW)

WAS:

Qty -011	Qty -013	Qty -015	Qty -017	Qty -019	Qty -021	Qty -023	Qty -041	Qty -043	Part Number	Description
X									D350-689-011	DUAL HIGH BACK SEAT INSTALLATION, LH
1	X								D350-689-013	FLOOR PROVISIONS KIT
		X							D350-689-015	SEAT MODIFICATION KIT
			X						D350-689-017	SHOULDER HARNESS KIT
				X					D350-689-019	CONTROL GUARD KIT
					X				D350-689-021	DUAL HIGH BACK SEAT INSTALLATION, LH
					1	X			D350-689-023	ENERGY ATTENUATING FLOOR PROVISIONS KIT
1							X		D350-689-041	DUAL HIGH BACK SEAT ASSEMBLY
					1			X	D350-689-043	DUAL HIGH BACK SEAT ASSEMBLY
	1					1			D3026-1	CHANNEL
	1					1			D3234-3	DOUBLER

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE #02)

DATE: 12.11.09
CERT. NO.: SH02-33
ISSUE NO.: 1

DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA DRAWING NO. DSI 9588 REV. B SHEET 6 OF 6 TITLE INSTALLATION CHANGE SCALE NTS COPYRIGHT © 2011 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.
DRAWN		
CHECKED		
MFG. APPR.	N/A	
APPROVED		
DE APPR.		
DATE	12.11.09	

29353

Work Order ID 99353

99353

April-05-13 1:18:18 PM

Item ID: D350-689-021

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Dual High Back Seat, LH

Start Date: 4/04/13 Start Qty: 1.00

1

Cust Item ID:

Required Date: 4/04/13 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals:

Process Plan: *MLS*

Date: *13-04-08*

Tooling:

Date:

Run Start ***NR1***

QC:

Date:

SPC (Y/N):

Date:

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

DSI 9588

B

IIN-D350-689

B

100

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile and create labels per PPP D350-689-021 CHG005

13-4-25

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging